


# Watertight Artesian Cap, Installation Instructions

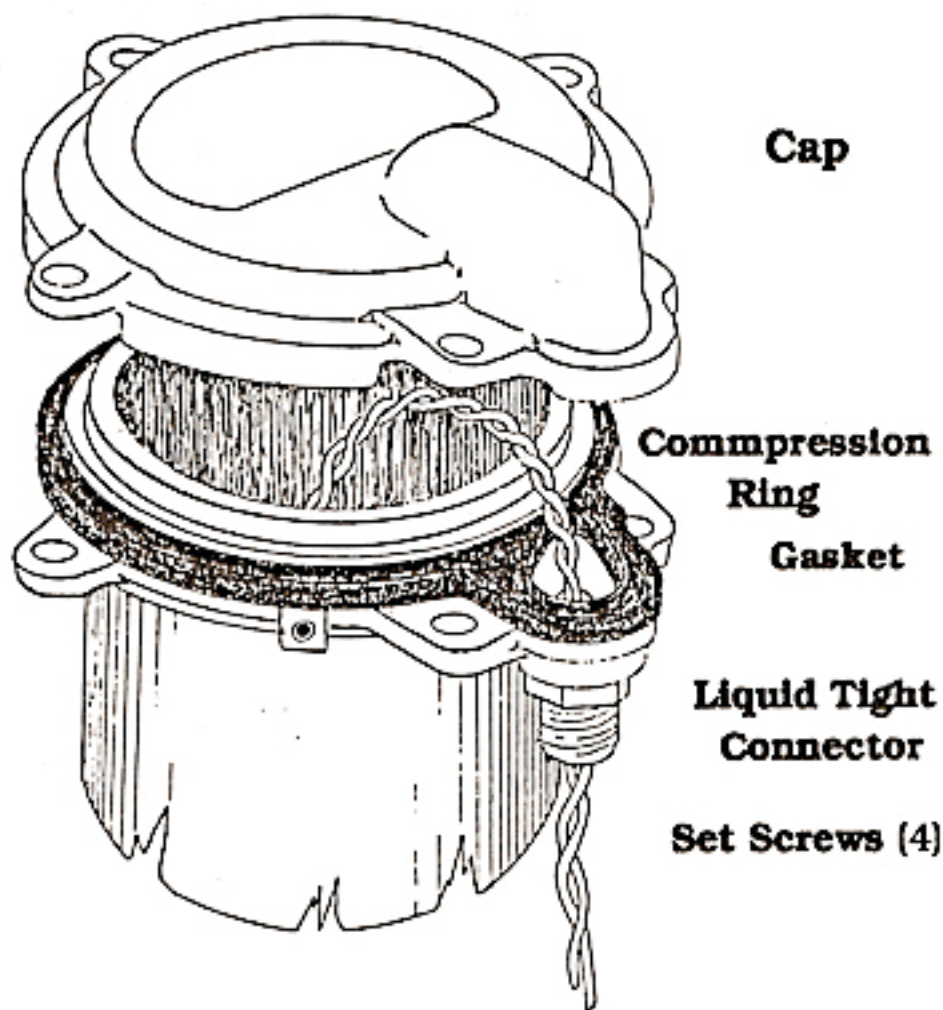

1. Install flange on casing.  
Do not tighten set screws at this time.
2. Install neoprene gasket on casing. Small end of oblong hole should align with vent screen.
3. Place compression ring on top of casing, flange side down.
4. Run pump leads through lower flange and liquid tight connector.
5. Use a sealant inside neoprene bushing to help seal pump leads. Tighten connector.
6. Place well cap on top of compression ring. Compression ring should be seated on top of casing and the well cap should be seated on top of the compression ring.
7. Install the five bolts through the cap and flange being sure the gasket is aligned with the cap. Tighten the bolts progressively in a circular pattern. Do not overtighten the bolts and bend the bolt ears.
8. Tighten the four set screws. If this installation is on a plastic casing, be careful not to deform the casing with the set screws.